


131 Main Pawl Spring, 113 Main Pawl, & Shaft Replacement

- A. To remove the old spring, remove the snap ring on the main pawl shaft (use a hammer and 2 nails or small punches to tap the ring equally from both sides). As shown in fig. 1.
- B. Slide the shaft out of the main frame and remove the pawl and spring.
- C. To install the new parts, hang the spring on the pawl stop.
- D. Slide the spring anchor pin on the pawl into the other end of the spring. As shown in fig. 2.
- E. Push the main pawl to line up the holes in the main pawl and main frame.
- F. Slide the main pawl shaft through the main frame and main pawl.
- G. Use a hammer and punch to install a new snap ring in the groove on the main pawl shaft. As shown in fig. 3.

Fig. 1 2 Ends of Snap Ring

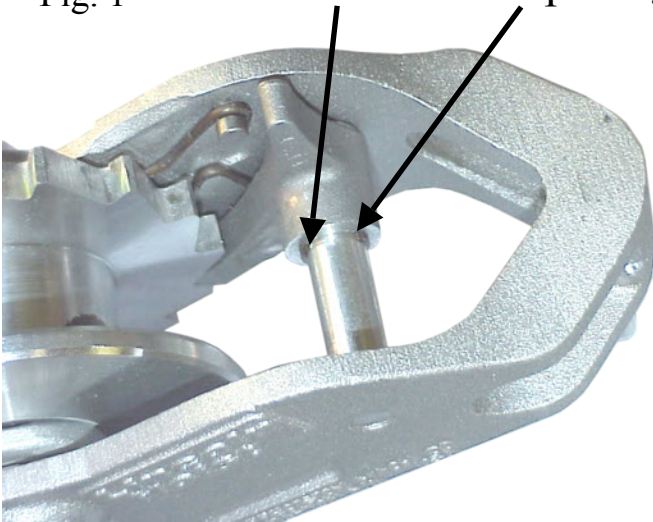

Pawl Stop Spring Anchor Pin

Fig. 2


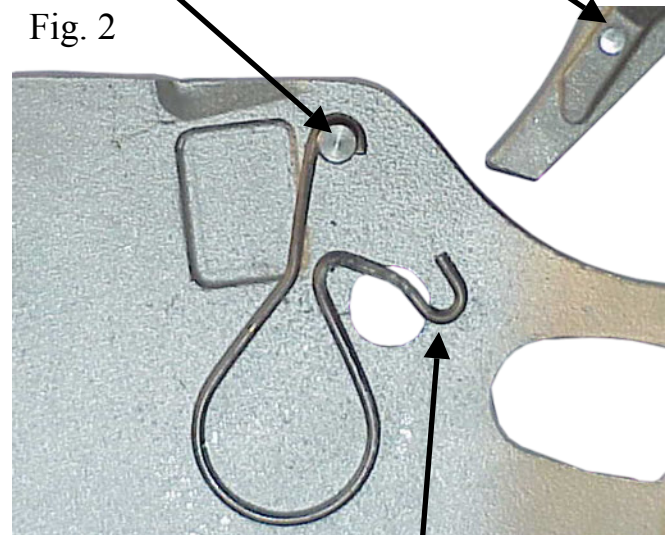


Fig. 3 Snap Ring

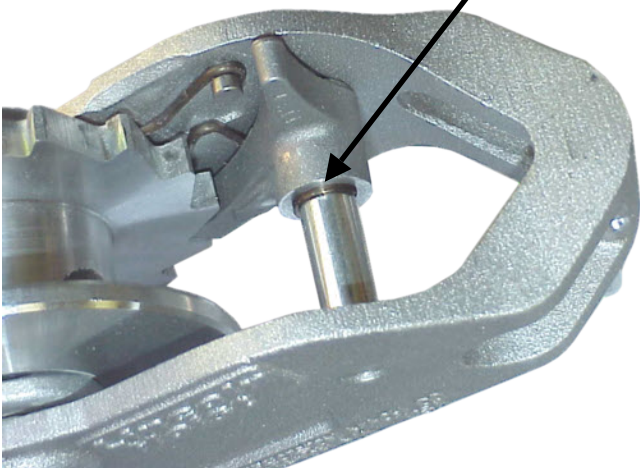

Loop for Spring Anchor Pin